


# PISTON 1™

Floor pump

Part# 7074791 (Dark Olive/Yellow)  
7074792 (Red/White/Blue)  
7074793 (Black/White)

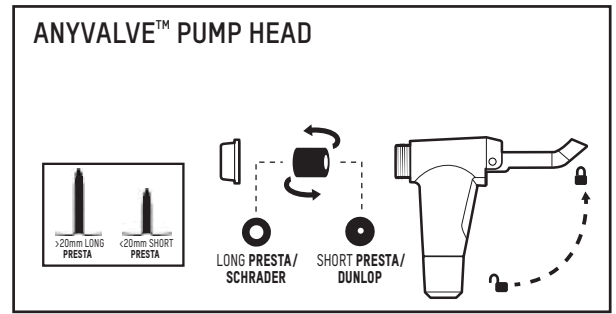


## INSTRUCTIONS FOR TIRE INFLATION

1. Remove the dust cap from your tire valve. If you have Presta valves, unscrew the metal locking barrel at the tip of the valve.
2. Push in the tip of either valve type to ensure that the valve isn't stuck and to blow out any dirt.
3. Choose the correct pump head insert for your valve type (FIGURE 1). If necessary, unscrew cap and reverse rubber insert.
4. Press pump head onto valve and lift the lever to lock.
5. Inflate to desired air pressure. DO NOT OVERINFLATE TIRE.
6. If necessary release air to adjust tire pressure. Use a tire gauge for accurate tire pressure pressure. (#7085517 Blackburn HONEST Digital Pressure Gauge)
7. Press pump head lever down and remove.
8. If using Presta valves, screw the locking barrel until tight.
9. Replace the tire valve dust cap.

## INSTRUCTIONS FOR BALL OR TOY INFLATION

1. Select the correct attachment (included) for your toy or ball and insert it into the long Presta side of the Anyvalve pump head. Lift the pump head lever to lock.
2. Insert the tip of the attachment into your ball or toy.
3. Inflate the ball or toy to the manufacturer required pressure.
4. Unlock the pump head lever, remove attachment and replace it into the included attachment holder.

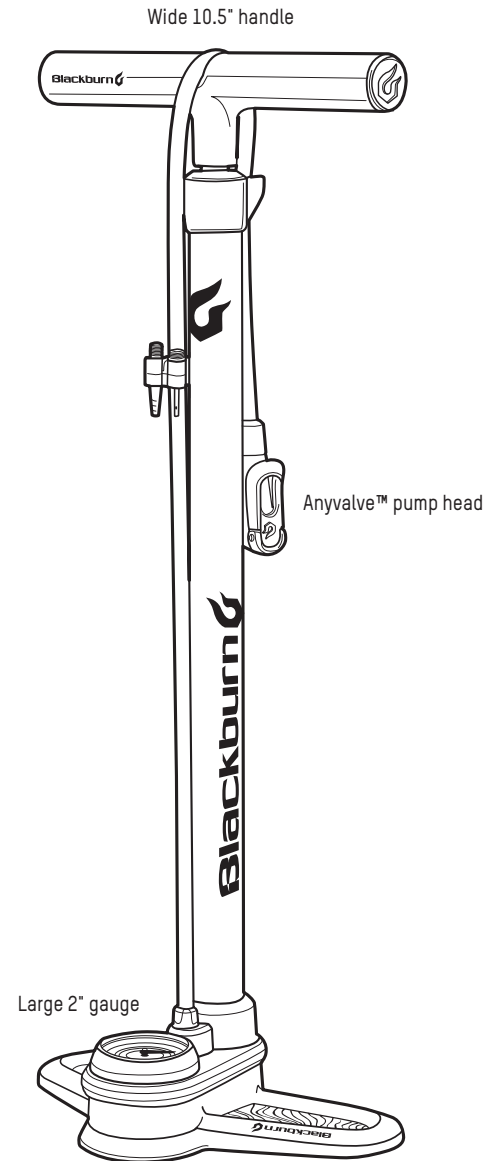

**WARNING:** NEVER OVERINFLATE YOUR TIRE. SEE TIRE SIDEWALL FOR MANUFACTURER RECOMMENDED TIRE INFLATION PSI. NEVER OVERINFLATE YOUR BALL OR TOY. SEE MANUFACTURER FOR RECOMMENDED PRESSURE.

Visit us at [blackburndesign.com](http://blackburndesign.com) for product updates.

**Blackburn** 

Customer Service: 1-800-456-2355  
Blackburndesign.com  
Printed in China

**LIFETIME  
WARRANTY**