

GRID™ FRONT

USB Rechargeable Light #7149589

QUICK START

1. Push button to power on.
2. Click to cycle modes.
3. Hold 1 second to power off, light powers back on in the last mode used.

FUEL GAUGE

Color LEDs in the power button help you monitor your light battery power, indicating that it's time to charge your light.

USB CHARGING

Fully charge the light before first use. The fuel gauge will flash when charging. When charging is complete the fuel gauge will be a steady green.

MODES

	LUMENS	RUNTIME	*AUTO-ECO
Solid	110	1.5h	-
Pulse	75	4h	+ 2h
Strobe	40	8.5h	+ 2h
ECO	40	20h	-

*Auto-eco switches on automatically at the end of Pulse and Strobe run times for an additional 2hrs of runtime.

MOUNTING

Pull strap around handlebar and attach to hook. Fits most handlebars, seatposts, seatstays, racks, bag light loops.

INCLUDES

(1) Li Po Battery, (1) USB charging cable, (1) Silicone strap

 100-50%  50-25%  <25-0%

Power button / Fuel gauge
Bouton d'alimentation / Jauge de charge
Einschalttaste / Kapazitätsanzeige



Silicone strap
Sangle en silicone / Silikonband



11¼IN. Cable USB-A to USB-C
Câble de chargement de 28 cm USB-A vers USB-C
Ladekabel (28,5 cm) USB-A zu USB-C

▲WARNING: Potential choking hazard to children. This light is extremely bright—do not aim directly into eyes. **UK ONLY:** When used for cycling, this light should be used in conjunction with a British Standard 6102/3 cycle light. **▲WARNING:** This product contains Bisphenol A which is known to the State of California to cause reproductive harm.

FCC STATEMENT: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

GRID™ AVANT

Lampe rechargeable USB
#7149589

DÉMARRAGE RAPIDE

1. Appuyez sur le bouton pour l'allumer.
2. Appuyez pour faire défiler les modes.
3. Maintenez le bouton enfoncé pendant 1 seconde pour l'éteindre. La lumière se rallumera sur le dernier mode utilisé.

JAUGE DE CHARGE

Les LED de couleur du bouton d'alimentation vous aident à contrôler la batterie de votre lampe pour vous indiquer qu'il est temps de la recharger.

CHARGEUR USB

Veillez à charger entièrement la lampe avant la première utilisation. Le voyant lumineux clignote durant la charge. Lorsque la batterie est pleine, le voyant reste allumé en vert.

MODES

MODES	LUMENS	TEMPS D'UTILISATION	*AUTO-ÉCO
Élevé	110	1,5 h	-
Pulse	75	4 h	+ 2 h
Stroboscopique	40	8,5 h	+ 2 h
ÉCO	40	20 h	-

*Auto-Eco s'allume automatiquement à la fin des temps de fonctionnement Pulse et Strobe pour 2 heures supplémentaires de fonctionnement.

INSTALLATION

Tirez la sangle autour du guidon et fixez-la pour l'attacher. S'adapte à la plupart des guidons.

COMPREND

(1) Batterie LiPo, (1) Câble de chargement USB, (1) sangle en silicone

▲ AVERTISSEMENT: Danger possible d'étouffement pour les enfants, Cette lampe est extrêmement brillante – ne pas diriger le faisceau directement dans les yeux.

GRID™ VORDERLICHT

Wiederaufladbares
USB-Vorderlicht
Art.-Nr. 7149589

SCHNELLSTART

1. Zum Einschalten Taste drücken.
2. Klicken, um zwischen den Modi zu wechseln.
3. Zum Ausschalten die Taste 1 Sekunde lang gedrückt halten. Das Licht schaltet sich im zuletzt verwendeten Modus wieder ein.

KAPAZITÄTSANZEIGE

Farbige LEDs in der Einschalttaste zeigen an, dass es an der Zeit ist, den Akku der Lampe aufzuladen.

USB-AUFLADUNG

Vor dem ersten gebrauch muss die lampe vollständig aufgeladen werden. Die Leuchtanzeige blinkt während des Ladevorgangs. Wenn der Ladevorgang abgeschlossen ist, leuchtet die Leuchtanzeige konstant grün.

MODI

MODI	LUMEN	BETRIEBSDAUER	*AUTO-ECO
Konstant	110	1,5 Std.	-
Impuls	75	4,0 Std.	+2,0 Std.
Stroboskop	40	8,5 Std.	+2,0 Std.
ECO	40	20 Std.	-

*Auto-Eco schaltet sich automatisch am Ende der Impuls- und Strobe-Laufzeiten für weitere 2 Stunden Laufzeit ein.

BEFESTIGUNG

Das Band um den Lenker ziehen und am Haken einhängen. Passend zu den meisten Lenkstangen.

IM LIEFERUMFANG ENTHALTEN

(1) Li-Po-Akku, (1) USB-Ladekabel, (1) Silikonband

▲ WARNUNG: Potenzielle Erstickungsgefahr für Kinder. Dieses Licht ist extrem hell. Nicht direkt in die Augen richten!

CUSTOMER SERVICE: 1-800-456-2355

LIMITED
LIFETIME
WARRANTY